

ULINE H-5784 FLOOR SAFE

1-800-295-5510
uline.com

TOOLS NEEDED



Drill



Phillips Screwdriver



17mm Wrench



7/16" Drill Bit



3/8" Drill Bit

HARDWARE INCLUDED




70mm Lag
Screw x 2



Washer x 2



40mm Plastic Anchor
x 2

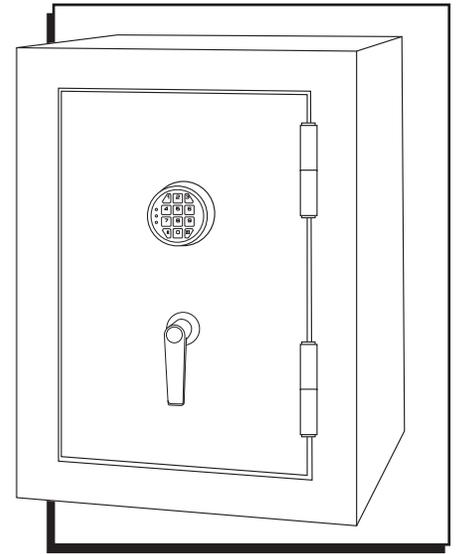

USAGE



IMPORTANT! Record the serial number from the tag on the back of the safe or from the tag on the front bottom corner of the safe.

Keep keys and combination in a secure place, away from children.

Do not store the backup key, your combination or this document in the safe.



WARNING! Keep your safe closed and locked at all times when not in use. Children could accidentally be locked inside the safe.

Do not move this safe using its handle. The handle should only be used for opening and closing the door of the safe.

Do not store electronic media, computer disks, audio-visual media or photographic negatives in this safe. This material will not survive the rated internal temperature of the safe. This material may be damaged or destroyed.

BATTERY INSTALLATION

1. You must first install the battery, which is located in the front protective styrofoam.




NOTE: When changing the battery, always hold the battery connecting cap while disconnecting or attaching the battery. Do not pull on the wires. Doing this could cause the power supply to become disconnected from the lock.

2. This safe uses one 9V alkaline battery.

3. When the battery is low and you press a button on the keypad, a red light will come on warning you that the battery is low.
4. To replace the battery, remove the cover by pressing the tab and turning the cover. (See Figure 1)

Figure 1

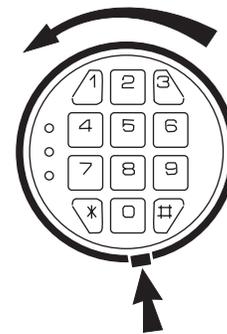

5. Replace the old battery and screw the cover back in place.

ELECTRONIC LOCK

1. After installing the battery, to open an electronic lock the first time, press the following numbers/symbols on the electronic keypad in this order: 1-5-9-#. These numbers are preset.



NOTE: You should change the entry code as soon as possible after opening the safe to ensure proper security.

2. After you have entered the factory code, you will need to turn the handle clockwise to open the door. You will have 5 seconds to turn the handle before the locking mechanism is reactivated.

USAGE CONTINUED

ENTERING YOUR SECURITY CODE

To enter your own security code, you will need to follow the steps listed below:

1. After opening the electronic safe (with the preset factory code of 1-5-9-#), locate the small red button on the inside of the door (near the hinge).
2. Press the red button and release it; you will hear a beep. The yellow light on the faceplate will activate and stay on for a period of time that should allow you to enter your code. You can only enter your code while the yellow light is on.
3. With the door open and the yellow light on, enter your own personal security code, which can be 3-8 digits long, and confirm your new code by pressing the "*" symbol on the electronic touch pad. Before you close the door, try the new security code to make sure the lock releases the handle so you can turn it and retract the live-action bolts.

 **NOTE: DO NOT SHUT THE DOOR UNTIL YOU HAVE CONFIRMED THAT YOUR NEW SECURITY CODE HAS BEEN ENTERED CORRECTLY.**

4. If the code fails, go through steps 1-3 again. If the code works successfully, record your combination in a secure place, away from children, not inside the safe. Then, you should close and lock the safe.
5. When you open the safe in the future, enter the security code you have set followed by the "#" symbol.
6. If the incorrect security code is entered 3 times, you will have an automatic lockout for 20 seconds before you can try your code again.
7. If the incorrect security code is entered 3 additional times, there will be a 5-minute lockout before the code can be tried again.

LOCKING THE SAFE

To lock the safe, close the door and rotate the handle counterclockwise until it stops. If the handle is not turned until it stops, the locking mechanism will not lock.

 **NOTE: Because the locking mechanism is deactivated for approximately 3 to 6 seconds after the combination is entered, wait a minimum of 6 seconds from the time the combination is entered to lock the safe.**

TURNING THE KEYPAD SOUND OFF/ON

You can turn off the "Beep" sound of the keypad by entering the code 6 3 3.

To turn the "Beep" sound on, enter the code 6 6.

SELECTING A LOCATION

1. The safe must be mounted to the floor. For optimal safety and security, the safe should be installed adjacent to a side wall with minimal space on either side of the safe and in an isolated, dry and secure area.
2. The safe should be flat against the wall and floor. Remove the baseboard if necessary.



CAUTION! Children should not play with or around the safe at any time.

SECURING THE SAFE



NOTE: The safe must be secured to the floor. Use the hardware provided or consult Uline Customer Service at 1-800-295-5510 for fastening hardware for your particular mounting surfaces.




NOTE: This safe must be mounted to the floor. Failure to do so will compromise the safety and security of the safe.

3. To secure your safe to the floor, it will first be necessary to drill pilot holes through the fire insulation in the floor of the safe. First, place the safe in the desired location. Lift the bottom carpeting up to find the two hole locations marked on the floor insulation. Drill holes through the insulation using the same diameter drill as the diameter of the mounting hardware you are using.




IMPORTANT! The fasteners you use must completely fill the hole you drilled into the insulation. (See Figure 2) You must use the fasteners after you drill the holes. Failure to do so will void the fire rating.

Figure 2

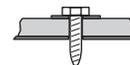

4. Use these holes to fasten the safe to the floor. Drill the appropriate diameter and depth of pilot holes into the floor depending on the type of hardware being used and the type of floor surface. (See Figure 3)

Figure 3

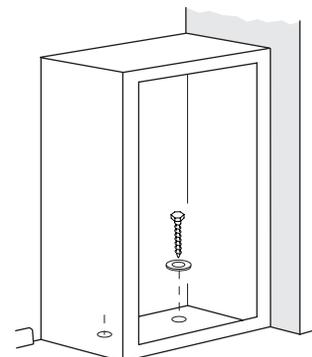


5. Secure the safe with fasteners and replace carpeting.

BACKUP KEY

A backup key has been provided in case you have forgotten or lost your security code. To open the safe using the backup key, follow the steps below:

1. Remove the cover by pressing the tab and turning the cover. (See Figure 4) The lock can hang by the connecting cable while unlocking the safe.

Figure 4

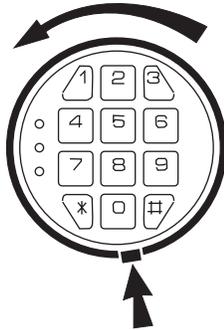

2. Insert the key in the key hole and turn clockwise 1/4 turn (until stopped) in order to unlock the safe. Rotate the handle and open the door.
3. Keep the door open until you have entered a new security code. Before entering your new code, remove the key and screw the cover back in place.
4. Enter your new security code following the instructions on page 2.