


# ULINE H-2545

## BIKE RACK MOUNTING HARDWARE


1-800-295-5510  
uline.com

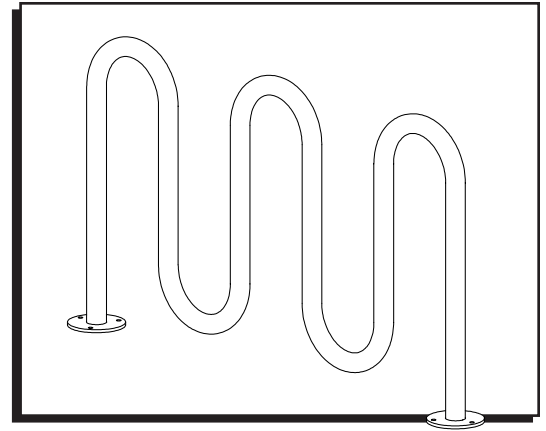

### ASSEMBLY


 **NOTE:** Hardware kit includes 6 spikes.

1. Drill a 1/2" diameter hole into the concrete, block or stone to a depth of 3<sup>5</sup>/<sub>8</sub>". (See Inset A)
2. Blow out the dust in the hole.
3. Drive the spike flush to rack base and into drilled hole. (See Inset B)
4. Repeat on remaining spikes.

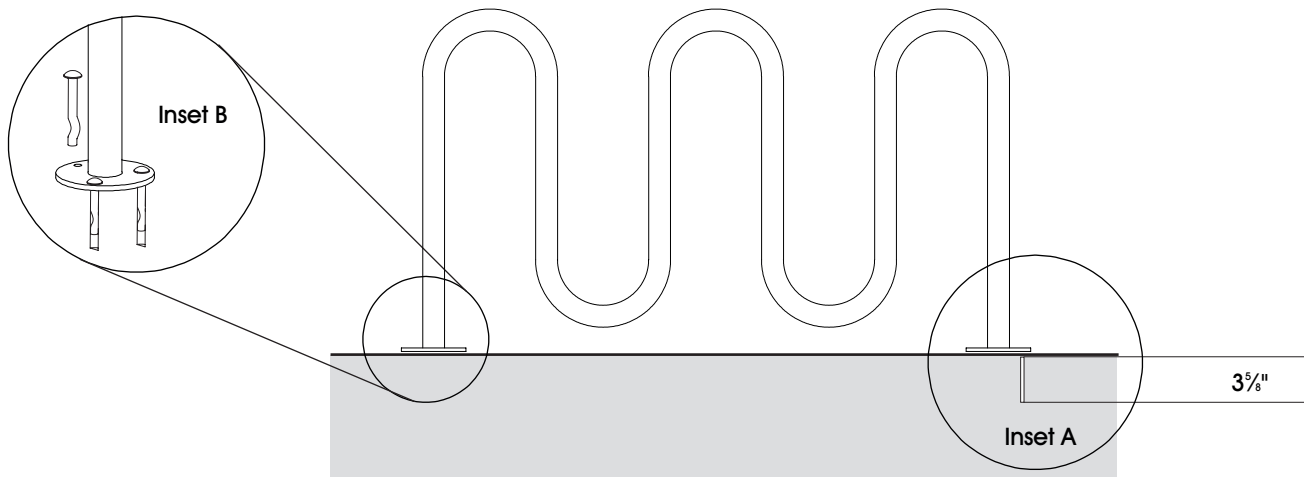

**ULINE H-2545**  
**TORNILLERÍA DE**  
**INSTALACIÓN PARA**  
**PORTABICICLETAS**

01-800-295-5510  
uline.mx

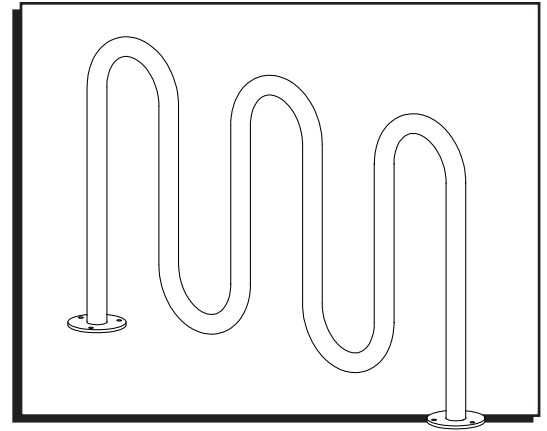


**ENSAMBLE**

 **NOTA:** Kit de tornillería incluye 6 clavos.


1. Taladre en el concreto, bloque o piedra un orificio de 12.7 mm (1/2") de diámetro a una profundidad de 9.2 cm (3<sup>5</sup>/<sub>8</sub>"). (Vea Figura A)
2. Sople para eliminar el polvo del orificio.

3. Coloque el clavo al ras en la base del rack y dentro del orificio taladrado. (Vea Figura B)
4. Repita la operación con los clavos restantes.

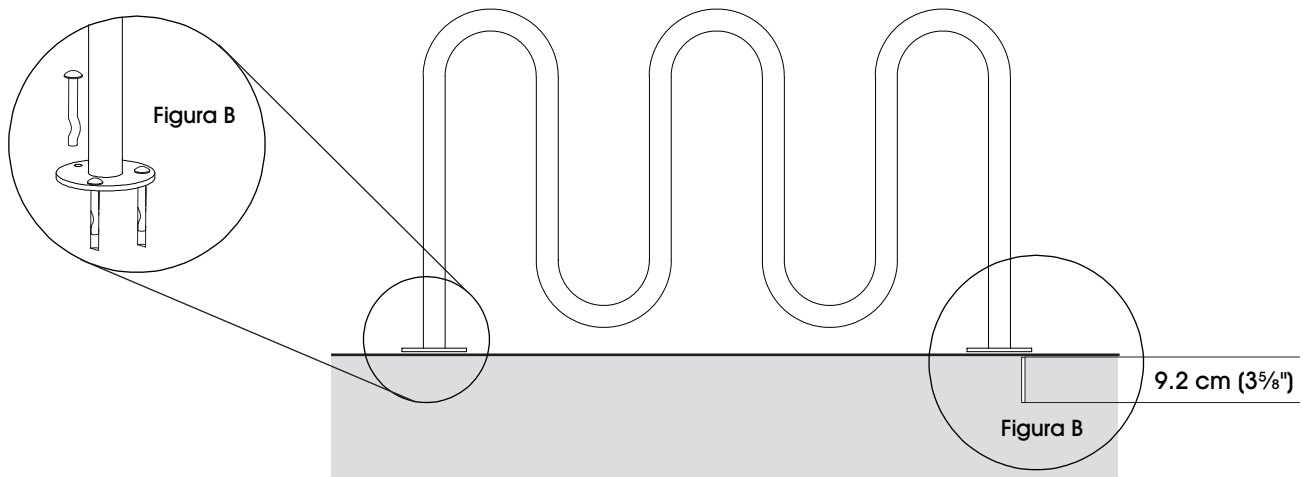

**ULINE H-2545**  
**MATÉRIEL D'INSTALLATION**  
**POUR SUPPORT À VÉLOS**

1-800-295-5510  
uline.ca

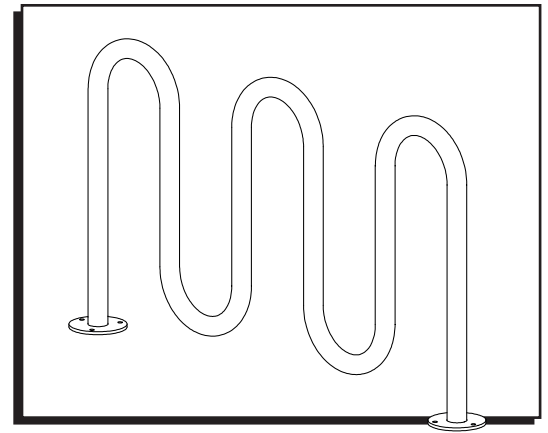

## MONTAGE



**REMARQUE :** Ensemble du matériel comprend 6 piquets.

1. Percez un trou de 12,7 mm (1/2 po) de diamètre dans du béton, une dalle ou une pierre à une profondeur de 9,2 cm (3 5/8 po). (Voir Encadré A)
2. Retirez la poussière du trou en soufflant dessus.
3. Enfoncez le piquet à travers les trous sur la base du support et dans le trou percé. (Voir Encadré B)
4. Répétez la procédure pour les autres piquets.

