



ULINE S-18441

CORSTAT™
IN-PLANT HANDLER –
23 x 12 x 13"

1-800-295-5510
uline.com

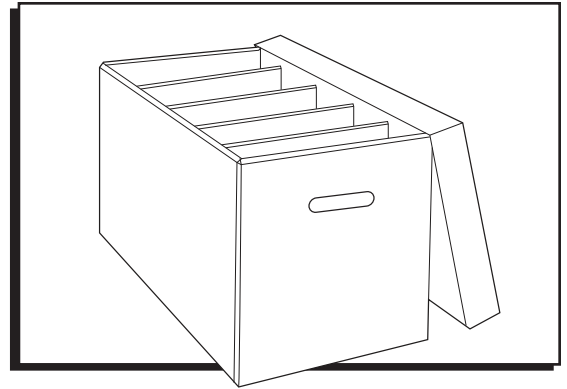

BOX ASSEMBLY

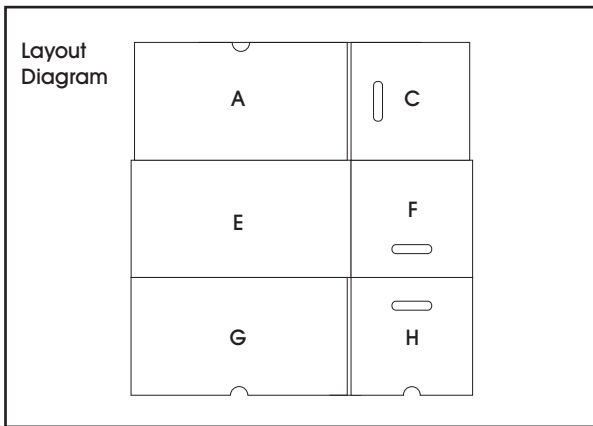

Certification Stamp

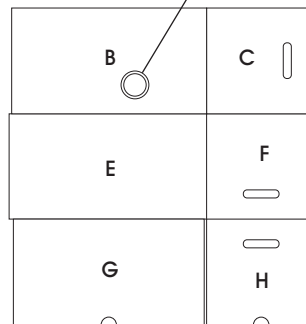


Figure 1

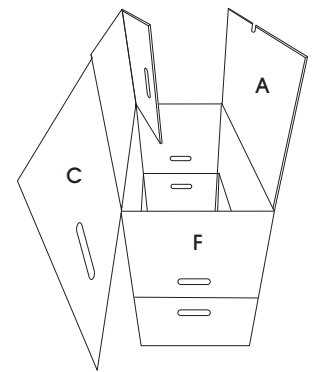


Figure 2

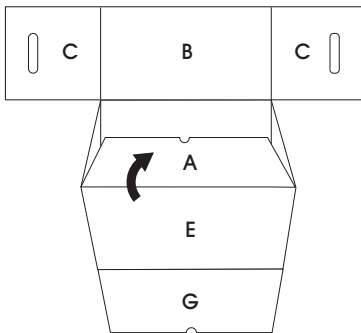


Figure 3

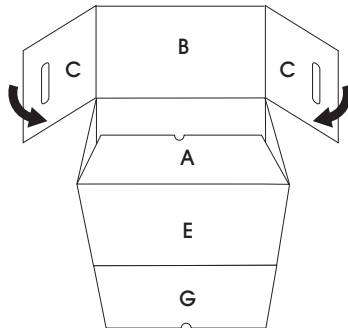


Figure 4

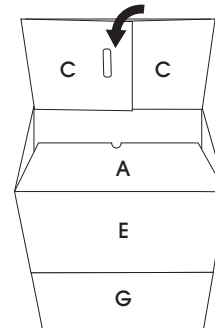


Figure 5

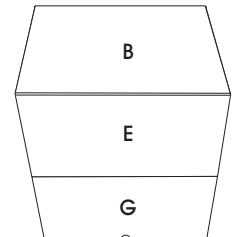


Figure 6

1. Hold box with certification stamp facing away and upside down. (See Figure 1)
2. Fold box to create a rectangle shape with the certification stamp on the top. (See Figure 2)
3. Fold interior bottom flap (A) inward. (See Figure 3)
4. Fold left and right side flaps (C) toward the exterior bottom panel (B). (See Figure 4)
5. Fold the exterior bottom panel along with the folded side flaps inward. (See Figures 5-6)
6. Turn the box over so that the certification stamp is side down and the box opening is on top. (See Figure 7)

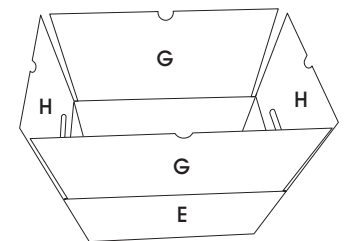


Figure 7

BOX ASSEMBLY CONTINUED

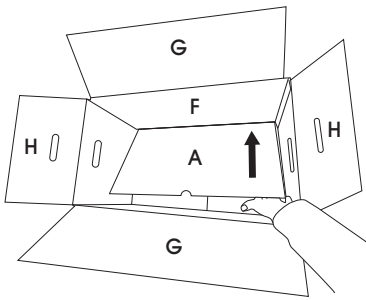


Figure 8

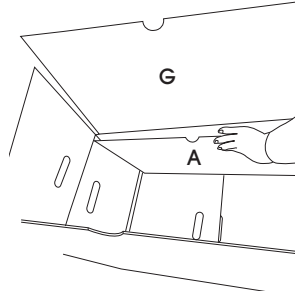


Figure 9

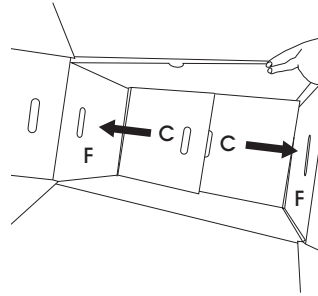


Figure 10

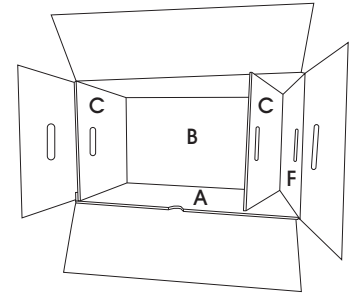


Figure 11

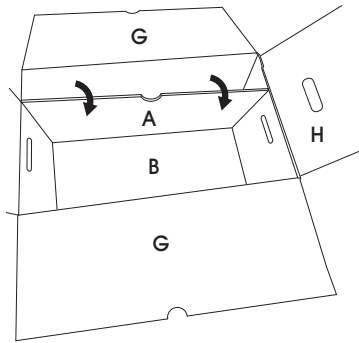


Figure 12

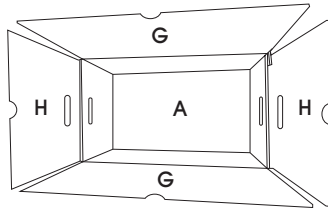


Figure 13

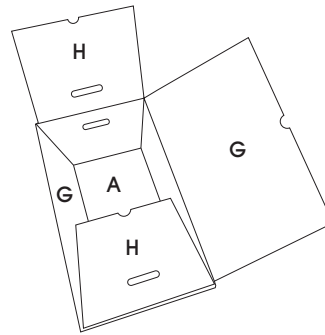


Figure 14

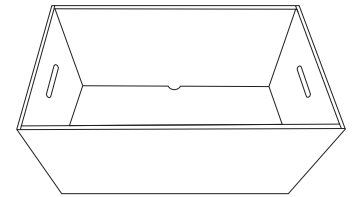


Figure 15

7. Lift interior bottom flap (A) flush against the front panel (E). (See Figures 8-9)
8. Lift the two side flaps (C) flush against the respective side panels (F). (See Figures 10-11)
9. Push down the interior bottom flap (A) so that it is flat against the exterior bottom panel (B). (See Figures 12-13)
10. Fold down all four flaps (H, G) one by one to finish the box. (See Figure 14)
11. Box is assembled. (See Figure 15)

BOX LID ASSEMBLY

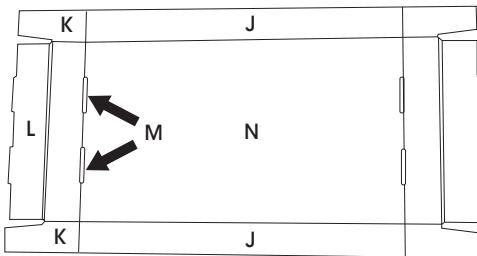


Figure 16

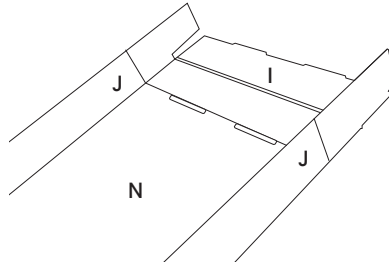


Figure 17

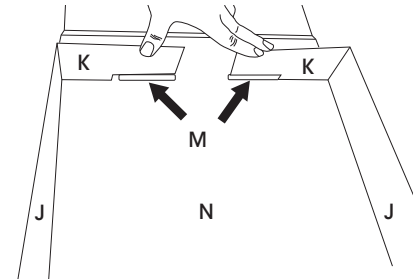


Figure 18

1. Fold in lid sides (J) along the crease. (See Figures 16-17)
2. On one side of the box lid, fold in lid sides (K) over slots (M). (See Figure 18)

BOX LID ASSEMBLY CONTINUED

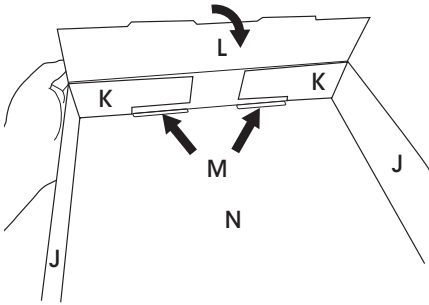


Figure 19

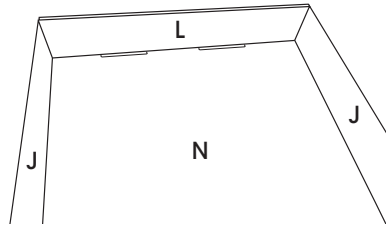


Figure 20

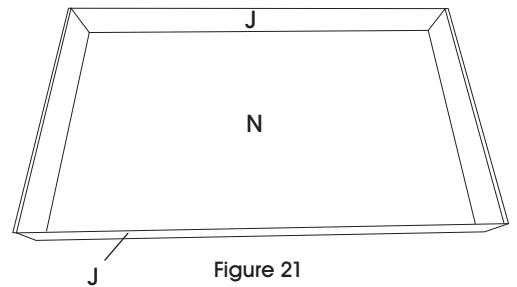


Figure 21

3. On the same side, fold box top lid (L) over tabs (K), locking the top lids tabs into slots (M) on the top panel. (See Figures 19-20)
4. Repeat steps 1-3 for the other side.
5. Lid is assembled. (See Figure 21)

BOX DIVIDER ASSEMBLY

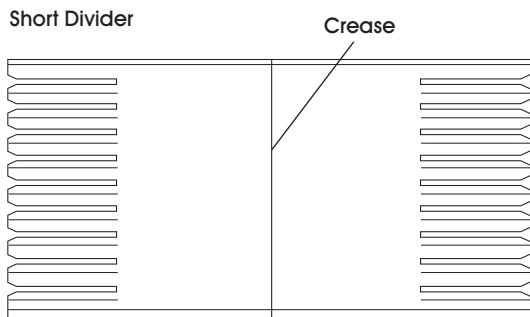


Figure 22

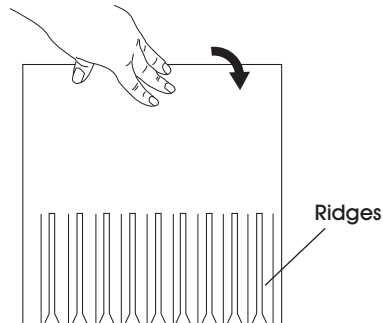


Figure 23

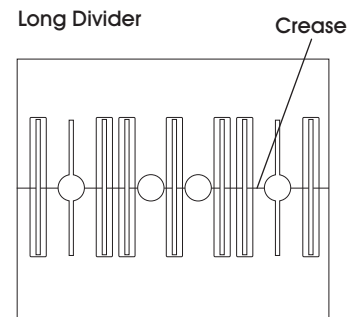


Figure 24

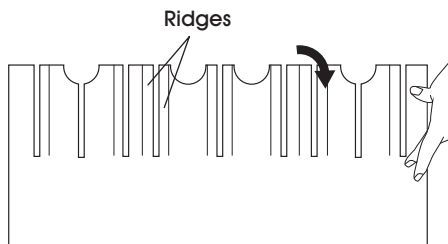


Figure 25

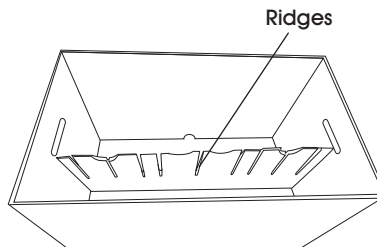


Figure 26

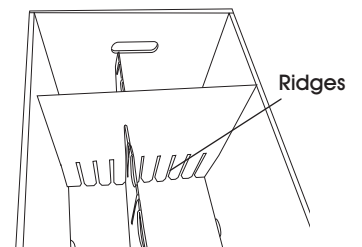


Figure 27

1. Fold short divider along the crease line. (See Figures 22-23)
2. Fold long divider along the crease line. (See Figures 24-25)
3. Insert long divider into the box as needed, ridges facing upward. (See Figure 26)
4. Insert short divider into the box as needed, ridges facing downward and align with the ridge from the long divider. (See Figure 27)

ULINE CHICAGO • ATLANTA • DALLAS • LOS ANGELES • MINNEAPOLIS • NYC/PHILA • SEATTLE • MEXICO • CANADA

1-800-295-5510

uline.com